



FLYING DIAMOND 6 AND 8 SET UP INSTRUCTIONS

1. Remove contents from stuff sack and lay on ground.
2. Assemble the six poles: two completely silver poles, two with dark gray ends, one shorter silver pole and one with red ends. Be careful to insert each pole section into the next by hand instead of allowing the shock cord to snap them together to ensure each pole section is fully seated.
3. Spread the body out fully. The front of the tent has orange webbing at the corners.
4. Feed the two all-silver poles through the two pole sleeves that cross over each other in the middle of the tent body. The ends of these poles go into the grommets on the webbing straps at points A and C on the tent body (see illustration).
5. Feed one pole with dark gray ends over the silver poles and through the pole sleeve above the front door. Insert the ends of this pole into the inner grommets located on the black webbing at points B.
6. Repeat step 5 with the remaining pole with dark gray ends. It will go through the pole sleeve that is opposite the sleeve in step 5. Use the outer grommets on the webbing at points B.
7. Feed the pole with red ends through the remaining sleeve on the body at the rear (separate room) of the tent and insert the ends of the pole into the remaining free grommets in the webbing at points C.
8. Attach all clips on the tent body to the poles.
9. Stake out the body being sure to pull tight when driving each stake. Start by staking out the webbing at points A, next C, next B, and finally the webbing loops at points D.
10. Drape the rainfly over the tent lining up the red webbing on the fly with the red webbing of the tent body.
11. Make sure the webbing at the corners of the rainfly are completely slackened. Buckle the buckles at points B and C together leaving the buckles at the front of the tent undone.
12. Feed the remaining (shorter silver) through the sleeve on the underside of the rainfly above the front door.
13. Near the two ends of the pole locate the two grommets in the webbing straps and insert the pole ends into the grommets, attach the two Velcro loops on the underside of the rainfly to the pole and buckle the orange buckles.
14. Affix the small Velcro loops on the rain fly to the poles around the front door and attach the two ends of the remaining buckles together.
15. Stake out the front and rear vestibules (points E and F).
16. Evenly tension the webbing on each buckle as needed to keep the rainfly taut.
17. Stake out all guy lines. Remember that you can attach multiple guy lines to a single stake. This is especially useful on the sides of the tent.

**Separate 6", large diameter pole segment included for emergency field repair.
Slide repair pole over the break to act as a splint.**

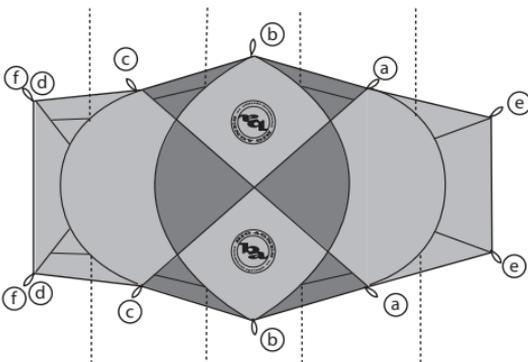

Flying Diamond Fly 6 & 8

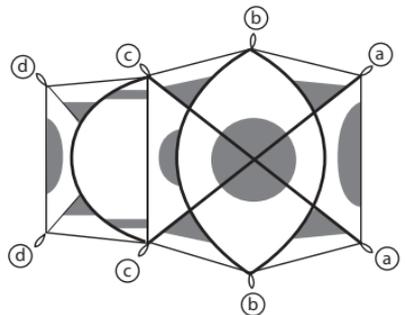

Flying Diamond Body 6 & 8



Flying Diamond 6

Flying Diamond 8

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.
tech@bigagnes.com

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. Try to avoid liquid lubricants because they attract dirt.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired, at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair must be clean and free of debris.



For more information on Tent Care or our Warranty and Return policy, see www.bigagnes.com or call 970-367-4400.

P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • www.bigagnes.com