

WYOMING TRAIL 2 SET UP INSTRUCTIONS

1. Remove contents from stuff sack. Spread tent body out on ground.
2. Assemble the poles: one large pole with one hub, and one shorter pole. To ensure each pole section is fully seated insert each pole section into the next by hand instead of allowing the shock cord to snap them together.
3. Position the main pole on top of the tent body, aligning it so that the color coded poles match up with the color coded webbing on the body. The SL model has green poles to match with green webbing and the Camp model has orange poles to match with orange webbing.
4. Insert the pole tip ends into the grommets at all four corners. NOTE: the vestibule area is formed by webbing straps that extend from the tent body and the grommets at the vestibule corners will be on these webbing straps.
5. Attach the H Clips on the tent body to the Swivel CHL on the poles. Then attach the other plastic clips on the tent body to the poleset.
6. Install the remaining shorter pole so that it crosses over the tent body and the pole structure that is already set up. Insert the pole tips into the remaining grommets on the side of the tent.
7. Attach this pole into the top of both Swivel CHLs and flip the lever over the pole. Attach the other plastic clips on the tent body to the pole.
8. Stake out the six webbing loops where the poles are inserted into the grommets.
9. Drape the rainfly over the tent body aligning it so that the color coded buckles match up with the color coded webbing on the body.
10. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the tent body.
11. Attach all Velcro loops on the underside of the fly to the corresponding poles for the best stability.
12. Stake out the second vestibule doors on the Camp model.
13. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
14. Stake out all guy lines.

Separate 6", large diameter pole segment included for emergency field repair. Slide repair pole over the break to act as a splint.

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for your Wyoming Trail, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, rainfly, poles and stakes.

1. Lay the footprint on the ground and stake out.
2. Assemble the poles: one large pole with one hub, and one shorter pole. To ensure each pole section is fully seated insert each pole section into the next by hand instead of allowing the shock cord to snap them together.
3. Position the main pole structure on top of the footprint, aligning it so that the color coded poles match up with the color coded webbing on the footprint. The SL model has green poles to match with green webbing and the Camp model has orange poles to match with orange webbing.
4. Insert the pole tip ends into the grommets at the four corners of the footprint.
5. Install the remaining shorter pole so that it crosses over the pole structure that is already set up. Insert the pole tips into the remaining grommets on the side of the tent.
6. Attach this pole into the top of both Swivel CHLs and flip the lever over the pole.
7. Drape the rainfly over the standing poles, aligning it so that the color coded buckles on the fly match up with the color coded webbing on the footprint.
8. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the footprint.
9. Attach all the Velcro loops on the underside of the fly to the corresponding poles for the best stability.
10. Stake out the six webbing loops where the poles are inserted into the grommets.
11. Stake out the second vestibule doors on the Camp model.
12. Evenly tension the webbing on each corner as needed to keep the rainfly taut. This will also help keep the poles in place.
13. Stake out all guy lines.

DAC Hardware:




H Clip




Swivel CHL




Stopper

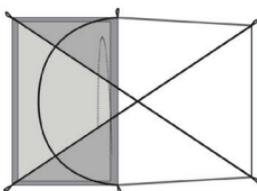


Wyoming Trail SL 2
Tent Body

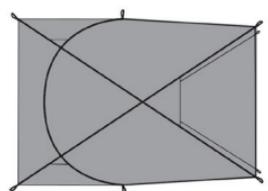

Wyoming Trail SL 2
Tent with Fly

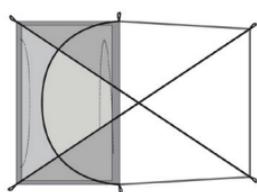

Wyoming Trail 2 Camp
Tent Body

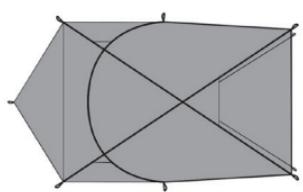

Wyoming Trail 2 Camp
Tent with Fly



Wyoming Trail SL 2



Wyoming Trail 2 Camp

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.
tech@bigagnes.com

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. Try to avoid liquid lubricants because they attract dirt.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired, at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair must be clean and free of debris.



For more information on Tent Care or our Warranty and Return policy, see www.bigagnes.com or call 970-367-4400.

P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • www.bigagnes.com